
Towing hitch accessories:

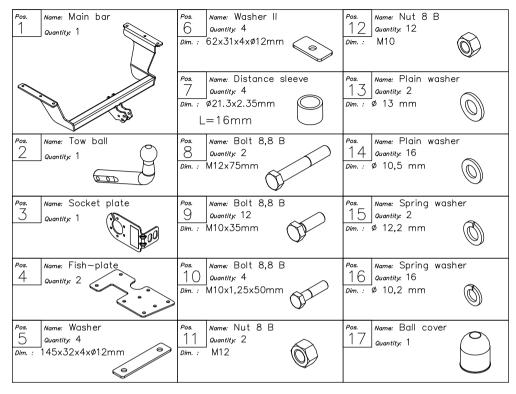



PPUH AUTO-HAK S.J.

Produkcja Haków Holowniczych Henryk & Zbigniew Nejman 76-200 SŁUPSK ul. Słoneczna 16K tel/fax (059) 8-414-414; 8-414-413 E-mail: <u>office@autohak.com.pl</u> www. autohak.com.pl

Towing hitch (without electrical set)

Class: A50-X	Cat. no. W04	
Designed for:		
Manufacturer: SUZUKI		
Model: BALENO		
Type: ESTATE (EG)		
produced since 08.1996 till 05.2002		

Technical data: D-value: 7,04 kN maximum trailer weight: 1300 kg maximum vertical cup load: 75 kg

Approval number according to Directive 94/20/EC: <u>e20*94/20*0363*00</u>

Foreword


This towing hitch is designed according to rules of safety traffic regulations. The towing hitch is a safety component and can be install only by qualified personnel. Any alteration or conversion of the towing hitch is prohibited and would lead to cancellation of design certification. Remove insulating compound and underseal from vehicle (if present) in the area of the matting surfaces of the towing hitch.

The vehicle manufacturer's specifications regarding trailer load and max. vertical cup load are decisive for driving whereat values for the towing hitch cannot be exceeded.

D-value formula:

Max trailer weight [kg]xMax vehicle weight [kg]X
$$\frac{9,81}{1000}$$
D[kN]Max trailer weight [kg]+Max vehicle weight [kg]X $\frac{9,81}{1000}$ =D[kN]

FITTING INSTRUCTION

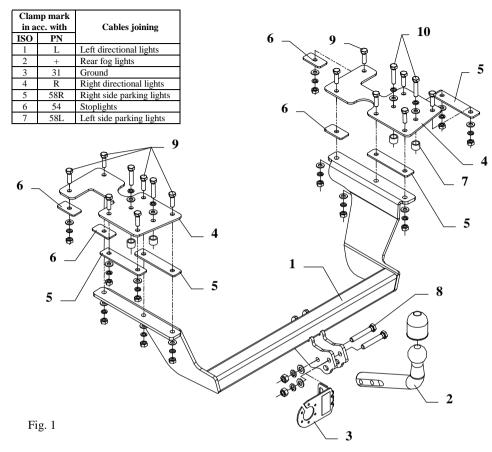

This towing hitch is designed to assembly in following cars: **SUZUKI BALENO ESTATE (EG)**, produced since 08.1996 till 05.2002, catalogue no. **W04** and is prepared to tow trailers max total weight **1300 kg** and max vertical load **75 kg**.


From manufacturer

Thank you for buying our product. Their reliability has been confirmed in many tests. Reliability of towing hitch depends also on correct assembly and right operation. For this reasons we kindly ask to read carefully this instruction and apply to hints.

The towing hitch should be install in points described by a car producer.

The instruction of the assembly

- 1. One ought to remove from the trunk:
 - the fitted carpet,
 - plastic cover plate from the back piece,
 - plastic cover plate of the floor,
 - the metal rise of the floor from the left and right side.

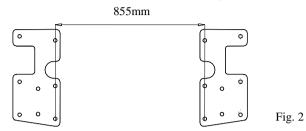

- 2. Unscrew bolts fastening arms of the bumper.
- 3. Apply fish-plates (pos. 4) such way, so holes, in which enter bolts M10x1,25x50mm (pos. 10) overlapped on holes, which were previously unscrewing bolts fastening arms of the bumper. Then marked the contour of fish-plates and after this put aside fish-plates inside contours remove the anti-noise layer. Put fish-plates (pos. 4) in this way, so holes for bolts M10x1,25x50mm (pos. 10) agree with holes after disassembly of towing hitch brackets. Mark contour of the fish—plates, next take them of and remove protective layer from inside of contour.
- 4. On holes fastening arms of the bumper put distance sleeves L=16mm (pos. 7). Then apply again fish-plates (pos. 4) and fix with bolts M10x1,25x50mm (pos. 10) as showed on the fig. 1.
- 5. Attention! Make sure whether fish-plates lay as one showed on the fig. 2.
- 6. By remaining holes of fish-plates (pos. 4) drill through holes ø10,5mm. Then into all holes insert bolts M10x35mm (pos. 9).
- 7. From the bottom of the car on protruding bolts put distance washers (pos. 5 and 6) and the main bar of the towing hitch (pos. 1) and fix as showed on the fig. 1.
- 8. To so prepared towing hitch fix tow-ball (pos. 2) and socket plate (pos. 3) by bolts M12x75mm (pos. 8) from accessories.
- 9. Tighten all bolts according to the torque shown in the table.
- 10. Connect electric wires of 7-poles socket according to the instruction of the car. (Recommend to make at authorized service station).
- 11. Complete paint layer damaged during installation.

Torque settings for	nuts and bolts (8,8):
M 8 - 25 Nm	M 10 - 55 Nm
M 12 - 85 Nm	M 14 - 135 Nm

NOTE

After install the towing hitch you should get adequate note in registration book (at authorised service station). The car should be equipped with:

- Indicators
- Tow mirrors

٠

After 1000km check all bolts and nuts. The ball of towing hitch must be always kept clear and conserve with a grease.