
FITTING INSTRUCTION

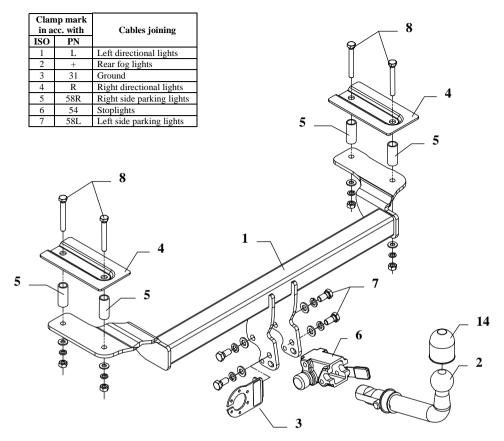

This towbar is designed to assembly in following cars: **FORD FIESTA, 3-5 doors** and **MAZDA 121 JASM/JBSM, 3 doors,** both produced since 02.1996 till 12.2001, catalogue no. **C002A** and is prepared to tow trailers max total weight **950 kg** and max vertical load **50 kg**.

From manufacturer

Thank you for buying our product. Their reliability has been confirmed in many tests. Reliability of towbar depends also on correct assembly and right operation. For this reasons we kindly ask to read carefully this instruction and apply to hints.

The towbar should be install in points described by a car producer.

The instruction of the assembly

- 1. Take the spare wheel out the bumper.
- 2. Find original metal covers on the left and right sight (inside the trunk), remove it, then you will see holes towards the chassis members.
- 3. Put the distance sleeves L=50mm (pos. 5) there and position the fishplates (pos. 4) and bolts M10x80mm (pos. 8) - see the fig.
- 4. Position the main bar of the towbar (pos. 1) at the bottom of the car and then fix it.
- 5. Fix body of the automat (pos. 6) and the socket plate (pos. 3) using bolts M12x25mm (pos. 7) from accessories. Place tow-ball (pos. 2) according to supplied instruction.
- 6. Tighten all nuts and bolts according to the torque shown in the table.
- 7. Connect to the electric wires according to the instructions of the car.
- 8. Complete the paint cover of towbar (during the mounting paint cover could be destroyed).

Torque settings for nuts and bolts (8,8):		
M6 - 11 Nm	M8 - 25 Nm	M10 - 5 0 Nm
M12 - 87 Nm	M14 - 138 Nm	M16 - 210 Nm


NOTE

After install the towbar you should get adequate note in registration book (at authorised service station). The car should be equipped with:

- Indicators
- Tow mirrors

After 1000km of exploitation check all bolts and nuts. The ball of towbar must be always kept clear and conserve with a grease.

Towbar accessories:

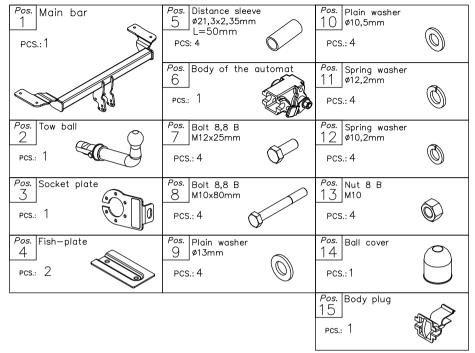



PPUH AUTO-HAK Sp.J.

Produkcja Zaczepów Kulowych Henryk & Zbigniew Nejman 76-200 SŁUPSK ul. Słoneczna 16K tel/fax (059) 8-414-414; 8-414-413 E-mail: <u>office@autohak.com.pl</u> www. autohak.com.pl

Towing hitch (without electrical set)

Class: A50-X Cat. no. C002A Designed for: Manufacturer: FORD Model: FIESTA Type: 3-5 doors Manufacturer: MAZDA Model: 121 Type: JASM/JBSM, 3 doors both produced since 02.1996 till 12.2001

Technical data: D-value: **5,78 kN** maximum trailer weight: **950 kg** maximum vertical cup load: **50 kg**

Approval number acc. to directive 94/20/WE: e20*94/20*0922*00

Foreword

This towbar is designed according to rules of safety traffic regulations. The towing hitch is a safety component and can be install only by qualified personnel. Any alteration or conversion of the towing hitch is prohibited and would lead to cancellation of design certification. Remove insulating compound and underseal from vehicle (if present) in the area of the matting surfaces of the towing hitch.

The vehicle manufacturer's specifications regarding trailer load and max. vertical cup load are decisive for driving whereat values for the towing hitch cannot be exceeded.

D-value formula:

Max trailer weight [kg]xMax vehicle weight [kg]X $\frac{9,81}{1000}$ D[kN]Max trailer weight [kg]+Max vehicle weight [kg]X $\frac{9,81}{1000}$ =D[kN]