FITTING INSTRUCTION

in acc, with Cables joining ISO PN 1 L Left directional lights 2 + Rear fog lights 3 31 Ground				1 1
Iso PN Left directional lights 2	Clamp mark		a 11	
L Left directional lights 2 + Rear fog lights 3 31 Ground 4 R Right directional lights 5 58R Right side parking lights 6 54 Stoplights 7 58L Left side parking lights 12 17 17 17 17 17 17 17			Cables Joining	
3 31 Ground 4 R Right directional lights 5 58R Right side parking lights 6 54 Stoplights 7 58L Left side parking lights 12 17 19 10 10 10 10 11 11 12			I oft discotional lights	
3 31 Ground 4 R Right directional lights 5 58R Right side parking lights 6 54 Stoplights 7 58L Left side parking lights 12 17 18 19 10 10 10 10 10 10 10 10 10				
5 58R Right side parking lights 6 54 Stoplights 7 58L Left side parking lights 12 17 19 10 10				
5 58R Right side parking lights 6 54 Stoplights 7 58L Left side parking lights 12 17 19 10 10				6 —
6 54 Stoplights 7 58L Left side parking lights 12 17 10 10 17 10 10 10 10 10 10				
7 58L Left side parking lights 12 7 58L 10 17 17 10 10 10 10 10 10 10				0
7 22 17 10 12 17				
7 22 17 10 12 17	7	58L	Left side parking lights	
11 Fig. 1	& ***			22 1 9 23 10 10 10 17 17 17 17 18 18 18 18 18 18 18 18 18 18 18 18 18

This towing hitch is designed to assembly in following car: **FIAT STILO ESTATE**, produced since 11.2002 till 2008, catalogue no. **R33** and is prepared to tow trailers max total weight **1300 kg** and max vertical load **60 kg**.

The instruction of the assembly

- 1. Disassemble the bumper and metal support.
- 2. Drill the holes ø11 outside the left and right chassis members (see the fig.2).
- 3. Position the left bracket (pos. 5) to the drilled holes in the left chassis member and element (pos. 4) to the drilled holes in the right one and fix it together with fish-plates (pos. 6 and 7) (Attention!!! Fish-plates 6 and 7 put inside the chassis members).
- 4. Position the main bar of towing hitch (pos. 1) and fix it using bolts M12x40mm (pos. 11) and together with jibs (pos. 8 and 9) using bolts M10x35mm (pos. 12).
- 5. Cut the metal support according to the fig. 3 and then reassemble it.
- 6. Cut the bumper according to the fig. 4 and then reassemble it.
- 7. Tighten all nuts and bolts according to the torque shown in the table.

- 8. Fix tow-ball (pos. 2) using bolts M12x70mm (pos. 10) from accessories.
- 9. Fix the socket plate (pos. 3) as shown on the drawing.
- 10. Connect to the electric wires according to the instructions of the car.
- 11. Complete the paint cover of towing hitch (during the mounting paint cover could be destroyed).

Torque settings for	nuts and bolts (8,8):
M 8 - 25 Nm	M 10 - 55 Nm
M 12 - 85 Nm	M 14 - 135 Nm

NOTE

After install the towing hitch you should get adequate note in registration book (at authorised service station). The car should be equipped with:

- Indicators
- Tow mirrors

After 1000km check all bolts and nuts. The ball of towing hitch must be always kept clear and conserve with a grease.


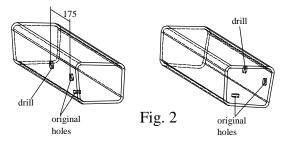


Fig. 3



Towing hitch accessories:

Pos. Main bar	Pos. Right fish-plate 6	Pos. Bolt 8,8 B 12 M10x35	Pos. Spring washer 18 ø12,2mm
PCS.: I	Pos. Left fish-plate	Pos. Bolt 8,8 B	Pos. Spring washer
	PCS:: 1	PCS.:1	PCS.: 6
Pos. Tow boll	Pos. Right jib	Pos. Plain washer 14 ø30xø10,5x2,5mm	Pos. Nut 8 B 20 M12
Pos. Socket plate	Pos. Left jib	Pcs.: 2 Pos. Plain washer 15 ø13mm	Pos. Nut 8 B 21 M10
PCS.: 1	PCS.: 1	PCS.: 8	PCS.: 4
Pos. Right bracket	Pos. Bolt 8,8 B M12x70mm	Pos. Plain washer 910,5mm	Pos. Nut 8 B 22 M8
Pos. Left bracket	Pos. Bolt 8,8 B	Pos. Plain washer	Pos. Spring
5 Pcs.: 1	PCS.: 6	17 ø8mm PCS.: 2	23 PCS: 1
			Pos. 24 Ball's cover
			PCS.: 1

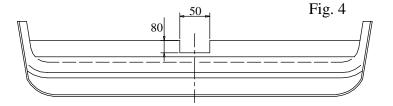

PPUH AUTO-HAK Sp.J.

Produkcja Zaczepów Kulowych Henryk & Zbigniew Nejman 76-200 SŁUPSK ul. Słoneczna 16K tel/fax (059) 8-414-414; 8-414-413 E-mail: office@autohak.com.pl www.autohak.com.pl

Towing hitch (without electrical set)

Class: A50-X

Designed for:

Manufacturer: FIAT Model: STILO

Type: **ESTATE**

produced since 11.2002 till 2008

Cat. no. **R33** Technical data: **D**-value: **8.1 kN**

> maximum trailer weight: 1300 kg maximum vertical cup load: 60 kg

Approval number acc. to regulations EKG/ONZ 55.01: <u>E20-55R-01 4439</u>

Foreword

This towing hitch is designed according to rules of safety traffic regulations. The towing hitch is a safety component and can be install only by qualified personnel. Any alteration or conversion of the towing hitch is prohibited and would lead to cancellation of design certification. Remove insulating compound and underseal from vehicle (if present) in the area of the matting surfaces of the towing hitch.

The vehicle manufacturer's specifications regarding trailer mass and max. vertical cup mass are decisive for driving whereat values for the towing hitch cannot be exceeded.

D-value formula:

 $\frac{\text{Max trailer weight [kg] Max vehicle weight [kg]}}{\text{Max trailer weight [kg] Max vehicle weight [kg]}} \frac{9.81}{100} = D [kN]$